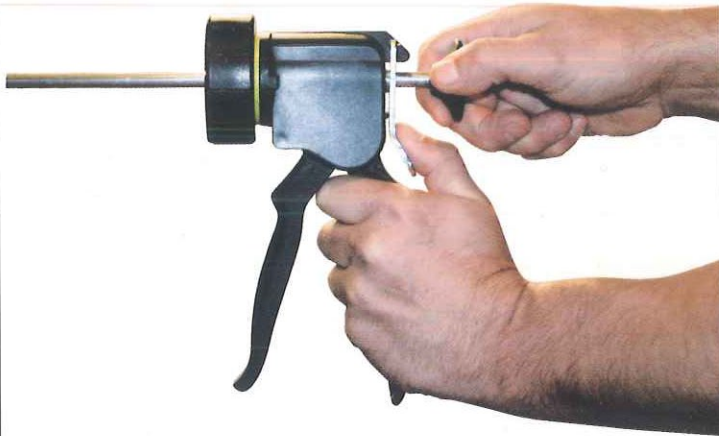


# IMPORTANT – PLEASE READ

To pull the piston back, use the following method: Grasp the stationary portion (back section) of the black handle, use thumb to press in the release lever, use your other hand to grasp the black knob and pull rod back towards you. (Fig. 1). DO NOT grasp both portions of the handle as it will not allow the rod to release (Fig. 2).

**CORRECT**



*Fig. 1*

**INCORRECT**



*Fig. 2*