



Ref.	Description	11 LB-Sack 050	22 LB-Sack 100
------	-------------	----------------	----------------

1.	Clamps	S05001	S05001
2.	SS Housing	S05002	S10002
3.	Rubber feet	L83525I	L83525I
4.	Crank Handle	S05004	S05004
5.	Front bushing f/fast & slow gears	S05005	S05005
6.	Slow speed gear	S05006	S05006
7.	Small bushing for slow speed gear	S05007	S05007
8.			
9.	Bolts for gear box	S05009	S05009
10.	Long shaft bushing (front & back)	S05010	S05010
11.	Long shaft bushing snap ring/back	S05011	S05011
12.	Gear box	S05012	S05012
13.	Handle screw washer	L77541I	L77541I
14.	Handle screw	L61534I	L61534I
15.	Handle for gear box	S05015	S05015
16.	Fast speed gear snap ring	S05016	S05016
17.	Reduction gear	S05017	S05017
18.	Fast speed gear	S05018	S05018
19.	Fast speed gear key	S05019	S05019
20.	Fast speed gear bushing c-clip	S05020	S05020
21.	Fast speed gear bushing (back)	S05021	S05021
22.	Long shaft bushing c-clip (front)	S05022	S05022
23.	Long shaft bushing (front & back)	S05023	S05023
24.	Long shaft	S05024	S10026
25.	Piston gasket	S05025	S05025
26.	Piston	S05026	S05026
27.	Valve spring	S05027	S05027
28.	Valve spring keeper	S05028	S05028
29.	Air release valve	S05029	S05029
30.	Stainless steel piston screw	S05030	S05030
31.	Cylinder	S05031	S10031
32.	Handle for cylinder	S05032	S07532
33.	Nuts for cylinder handle	S05033	S05033
34.	Stuffing funnel-Use LEM numbers	223,224,225,226	223,224,225,226
35.	Retaining ring	S05035	S05035