



CAT# 168SS STAINLESS STEEL CUBER

ASSEMBLY DIRECTIONS

- Attach both legs (#12, #15) to the base (#13). Make sure the counter-sunk screw holes in the legs match up with the holes in the poly mounting board.
- Using the Allen head wrench, attach the legs to the poly board with the base screws. (#14)
- Attach the lower housing (#16) to the legs. Make sure the drive shaft hole is toward the right leg. Use the shorter of the Allen head screws (#11) on the right side. The longer screws (#11A) go on the left side.
- Attach the meat chute (#1) to the upper housing (#4) with the meat chute screws (#2) and washers (#3).
- Place the drive roller (#8) into the lower housing (#16) so that the handle end sticks out the hole on the right side.
- Attach the upper housing (#4) to the lower housing (#16) with the upper housing screws (#5). The hole in the side of the upper housing will cover the extended driven roller shaft used for attaching the crank handle.
- Place the combs (#6) in the appropriate L or R side of the opening in the upper housing and attach the handle components (#9, #10).

DISASSEMBLY AND CLEANING INSTRUCTIONS

- Keep Children at a safe distance from machine while cleaning.
- Remove the thumbscrew (#10) from the handle (#9).
- Remove handle from the drive shaft (#8).
- Remove the combs (#6) from the upper housing by lifting up on combs.
- Remove the two Allen head upper housing screws (#5) from the upper housing (#4).
- Remove the upper housing (#4). Warning: this will expose the blade rollers. Take care when handling the blade rollers. Protective gloves are recommended.
- Remove the drive shaft components by simultaneously lifting up on each end of the blade roller to separate them from the lower housing (#16). Remove one drive shaft at a time.
- To disassemble the tenderizing rollers remove the nylon cap (#26) and clip (#27) on the end of the shafts and slide the parts off the shafts (# 7 & #8). Be careful not to damage the nylon cap and clip when removing.
- Wash all parts thoroughly with hot water and mild dishwashing liquid. A long bristle brush is recommended for cleaning the assembled blade rollers. Take extra care when handling the blade rollers. Protective gloves are recommended.
- Dry parts thoroughly before re-assembling.



168SS Stainless Steel Tenderizer

NUMBER	DESCRIPTION	QTY. PCS
1	Meat Chute	1
2	Meat Chute Screws	2
3	Washers	2
4	Upper Housing	1
5	Upper Housing Screws	2
6	Meat Combs (Sold as a set.)	2
7	Driven Shaft	1
8	Drive Shaft	1
9	Handle	1
10	Handle Screw	1
11	Short Allen Screws	2
11A	Long Allen Screws	2
12	Right Leg	1
13	Base	1
14	Base Screws	4
15	Left Leg	1
16	Lower Housing	1
17	Roller Assembly Screws	4
18	Gear Washer (1)	2
19	Gear	2
20	Gear Washer (2)	2
21	Bushing	2
22	Wide Spacer	26
23	Blades	26
24	Narrow Spacer	2
25	Stainless Steel Washer	2
26	Nylon Cap	2
27	Spring Clip	2
28	Allen Wrench	1
29	Clamps	2
30	Driven Shaft Assembly (not shown)	1
31	Drive Shaft Assembly (not shown)	1

