



IMPORTANT- PLEASE READ

Whenever you are changing plates or knives in the grinder, doing any maintenance on the grinder, cleaning the grinder, or the grinder is not being used be sure that the foot switch is disconnected from the electric supply and the switch on the grinder is in the “OFF” position.

If the grinder switch is “ON” and the foot pedal is bumped or depressed, serious injury may occur.

To Install Switch: Be sure the switch on the grinder is in the “OFF” position. Plug the power cord on the grinder into the back of the plug on the foot pedal. Now insert the plug of the foot pedal into a 110 V. electric outlet. Turn the switch on the grinder to the “ON” position. The grinder will not operate until the foot pedal is depressed with your foot. To stop the grinder, release the pressure on the foot pedal by raising your foot.

LEM Products, 109 May Drive, Harrison, OH 45030

www.lemproducts.com

877-536-7763



IMPORTANT- PLEASE READ

Whenever you are changing plates or knives in the grinder, doing any maintenance on the grinder, cleaning the grinder, or the grinder is not being used be sure that the foot switch is disconnected from the electric supply and the switch on the grinder is in the “OFF” position.

If the grinder switch is “ON” and the foot pedal is bumped or depressed, serious injury may occur.

To Install Switch: Be sure the switch on the grinder is in the “OFF” position. Plug the power cord on the grinder into the back of the plug on the foot pedal. Now insert the plug of the foot pedal into a 110 V. electric outlet. Turn the switch on the grinder to the “ON” position. The grinder will not operate until the foot pedal is depressed with your foot. To stop the grinder, release the pressure on the foot pedal by raising your foot.

LEM Products, 109 May Drive, Harrison, OH 45030

www.lemproducts.com

877-536-7763