



ATTENTION:
If any components of this unit are broken,
or if the unit does not operate properly,
please contact LEM Products at
1-877-536-7763
For more great products or a free catalog
log onto www.lemproducts.com



UNIVERSAL FOOT SWITCH

USE & MAINTENANCE

724



FOOT SWITCH FEATURES




CAUTION

**To avoid personal injury, do not use foot switches on machinery lacking effective point-of-operation safeguards.
Disconnect input power before installing or removing this control.**

The S100-Series foot switches make it easy to turn electrical equipment on and off with the foot, freeing the hands to perform other operations or providing ergonomic improvement to a workstation. The simple momentary action occurs by pressing down on the front of the switch; an internal spring will return the switch to the “off” position upon release. Ideal for light-duty industrial, medical, dental, and office equipment.

Design features:

- Momentary action – press and hold to turn on, release to turn off.
- Durable steel case with powder-painted finish.
- Cover pivots on a steel shaft, providing smooth, precise motion.
- Wide, low-profile shape makes it easy on the user.
- Heel rests on the floor when using this switch.
- Heavy-duty cable with flexible strain relief.
- Non-slip 3M® traction pads.
- Certified to CSA and UL standards.

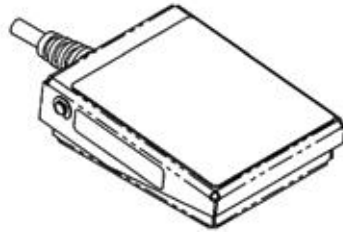

Quality features:

- Designed and manufactured under a quality system certified to ISO 9001 requirements.
- Includes a 1-year warranty on parts and labor.
- Made in USA of imported and domestic components.

Specifications:

- Dimensions, L x W x H: 4.3” x 3.5” x 1.4”
- Weight (S100-1001): 1.4 pounds
- IEC enclosure rating: IP-21; NEMA Type 1
- Finish: powder paint, black



(cable with 3-pronged series connector shown)

Model	Action*	Rating	Contacts	Cord Set	Price	Certification
S100-1001	momentary	10 amp, 125 VAC	SPDT	8-foot cable with connector	\$21.40	
S100-1002	momentary	10 amp, 125/250 VAC	SPDT	8-foot cable with leads	\$20.00	
S100-1501	momentary	15 amp, 125 VAC	SPDT	8-foot cable with connector	\$22.75	
S100-1502	momentary	15 amp, 125/250 VAC	SPDT	8-foot cable with leads	\$21.10	

*Momentary action: Press and hold to turn on, release to turn off.

SAFETY

Whenever you are changing plates or knives in the grinder, doing any maintenance on the grinder, cleaning the grinder, or the grinder is not being used be sure that the foot switch is disconnected from the electric supply and the switch on the grinder is in the “OFF” position.

If the grinder switch is “ON” and the foot pedal is bumped or depressed, serious injury may occur.

To Install Switch: Be sure the switch on the grinder is in the “OFF” position. Plug the power cord on the grinder into the back of the plug on the foot pedal. Now insert the plug of the foot pedal into a 110 V. electric outlet. Turn the switch on the grinder to the “ON” position. The grinder will not operate until the foot pedal is depressed with your foot. To stop the grinder, release the pressure on the foot pedal by raising your foot.